


# Electric Inset Fire - Spacer Installation Guide

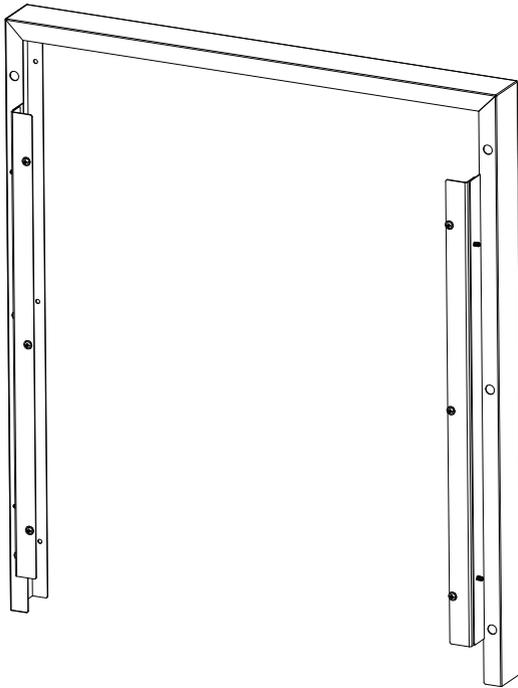

Please read through the use & care manual provided with this product first.



[www.firedupcorporation.com/manual](http://www.firedupcorporation.com/manual)

## PARTS PROVIDED

- Spacer (Assembled inc Brackets)
- Screw Driver
- Spanner
- 6x Self Tapping Screws
- 4x Hex Head Bolts


## Installation

1.

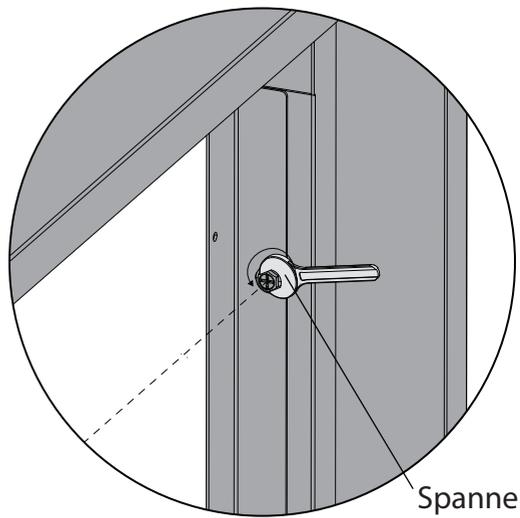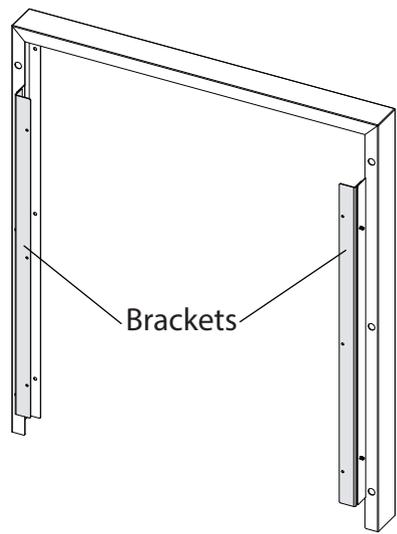


Ensure two brackets are fastened loosely, not tight. If tight, loosen with spanner provided.

2.

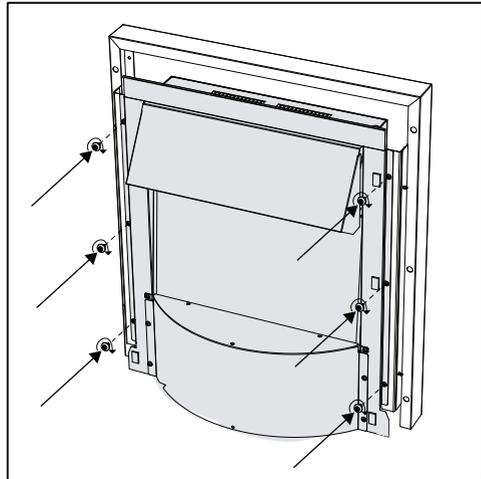


Attach inset fire to spacer, using self tapping screws provided, & screw driver.

3.

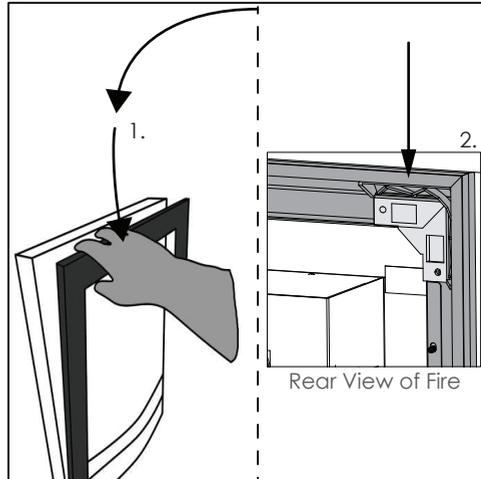

Position the bottom of the trim behind the locating brackets on the fire, push the trim forward at the top, and then drop down, ensuring the fire locates within the corners of the trim. Then push down.

4.

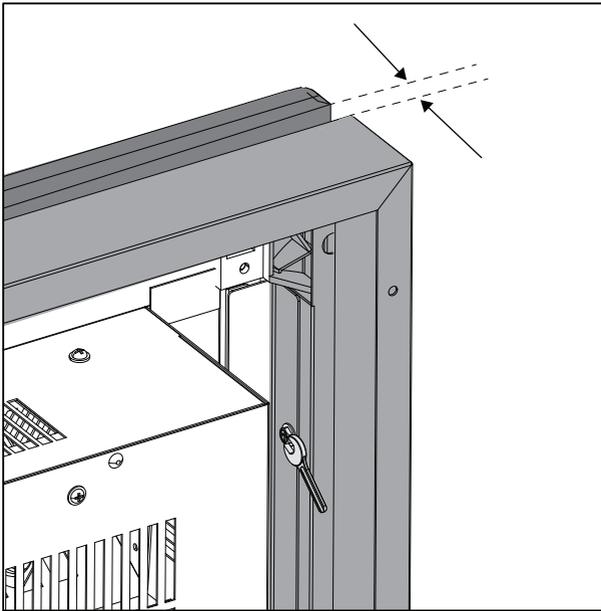

From the rear, adjust the trim and close any gaps, then tighten all 4 bolts.

5.



Screw ends will be present on the rear of the fire, beware of sharp edge .

