


FIREBOX WALL INSTALLATION WITH TRIM

(This guide is to be used in conjunction with the manual supplied with the fire)

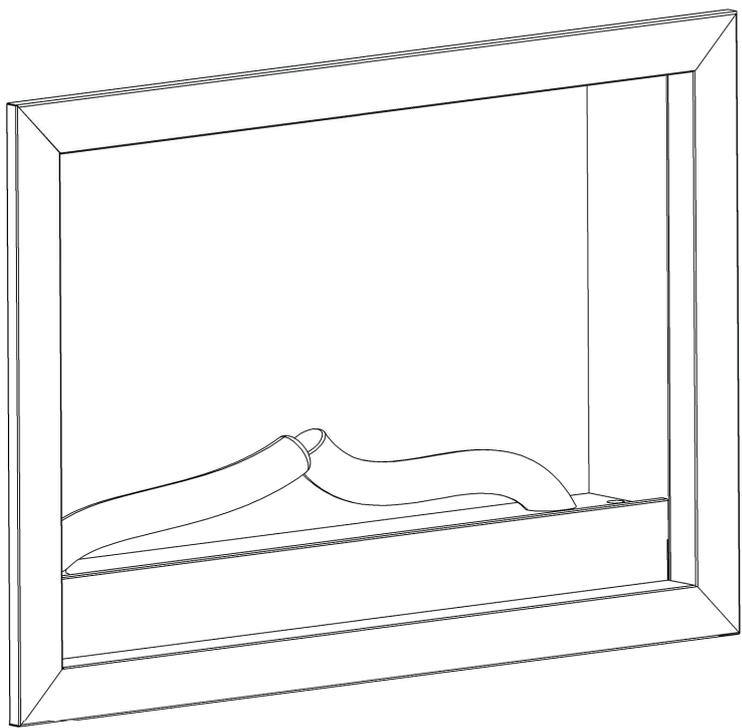



Please read through the use & care manual provided with this product first.

www.firedupcorporation.com/manual

PARTS SUPPLIED

- 1 x Trim
- 2 x Fixing Brackets
- 6 x Screws

Opening Requirements

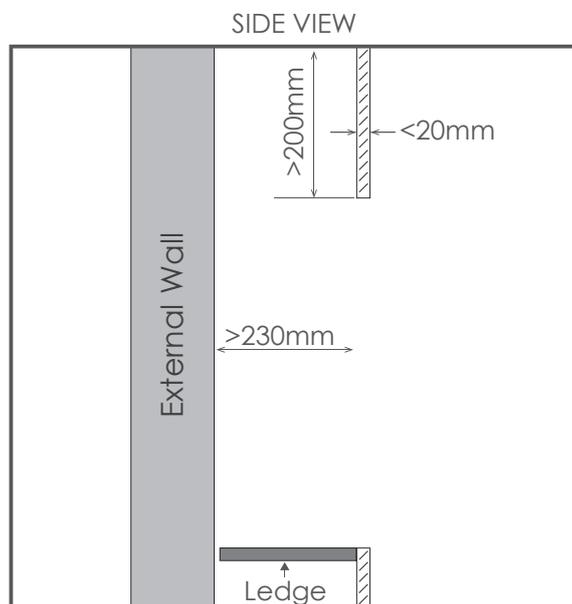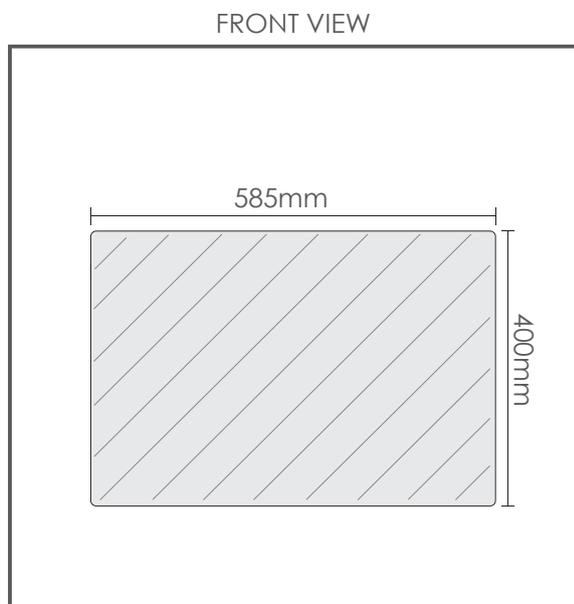


Behind the wall, a ledge must be positioned at the bottom of the opening for the firebox to sit on.

It is vital the wall thickness is less than 20mm


Behind the wall, there must be a clearance from the top of the opening of at least 200mm to accommodate the heater.

Installation

1. Remove the 4 x screws and metal tabs.

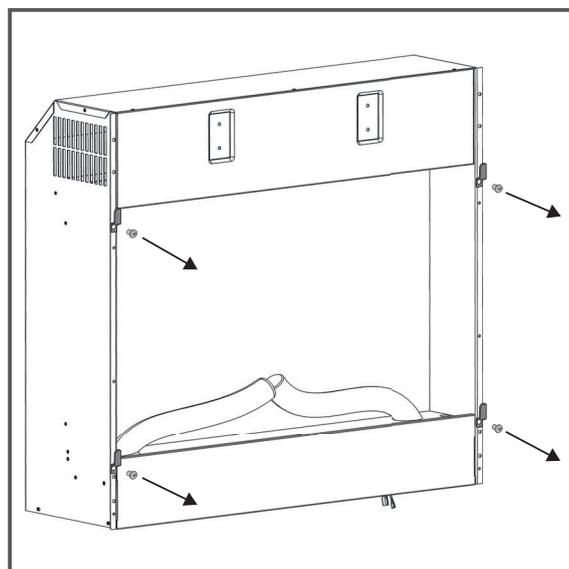


2. Tilt Firebox and insert into wall. Sit the Firebox on the ledge/stand central to the opening in the wall

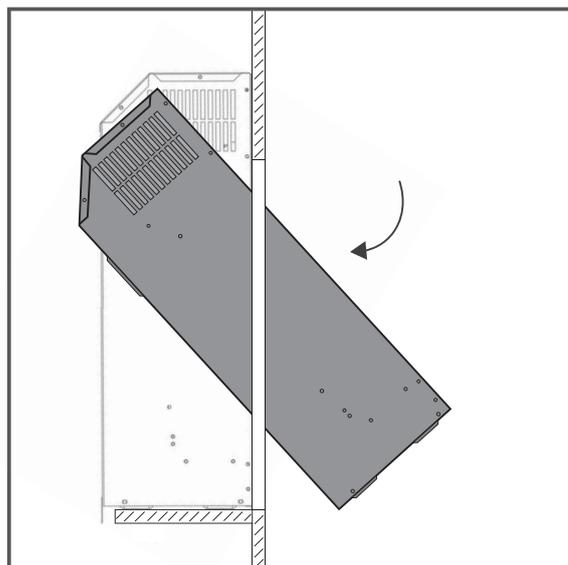


3. Once in the wall, locate the 2 x fixing brackets and fix to the firebox using 4 x screws removed from the metal tabs.

The front of the brackets should sit in front of and flat against the wall to ensure it cannot be pushed behind the opening.

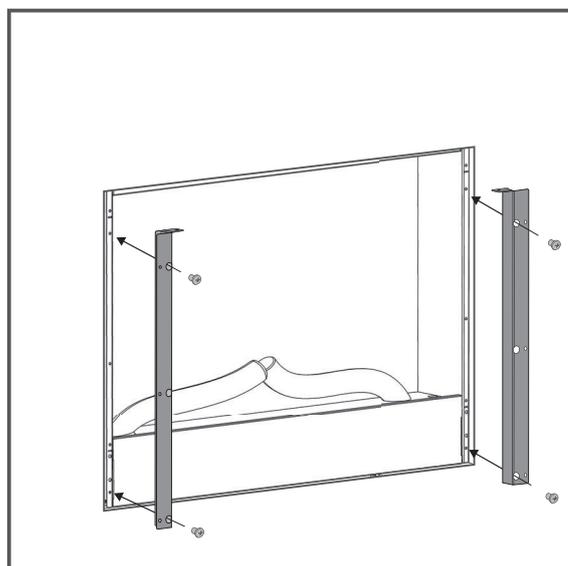


4. Once flat against the wall, use 4 x screws to secure the Firebox in place.


Ensure appropriate fixings are used when securing Firebox to the wall.

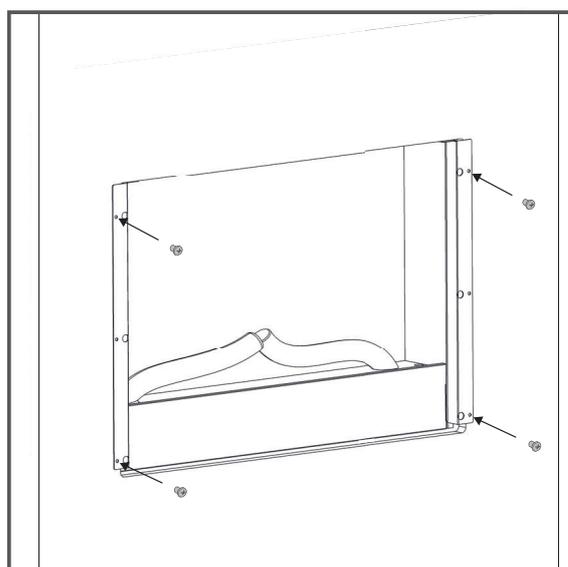

5. On the trim, ensure the 2 x cut out slots are at the top.

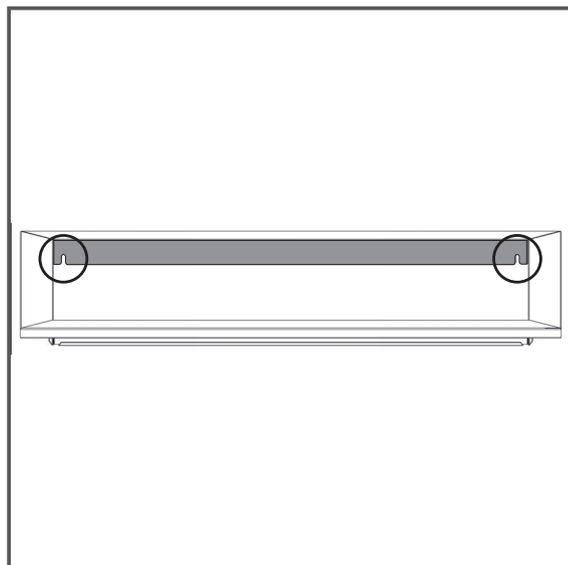

Then, push the trim onto the Firebox so it is flat against the wall.

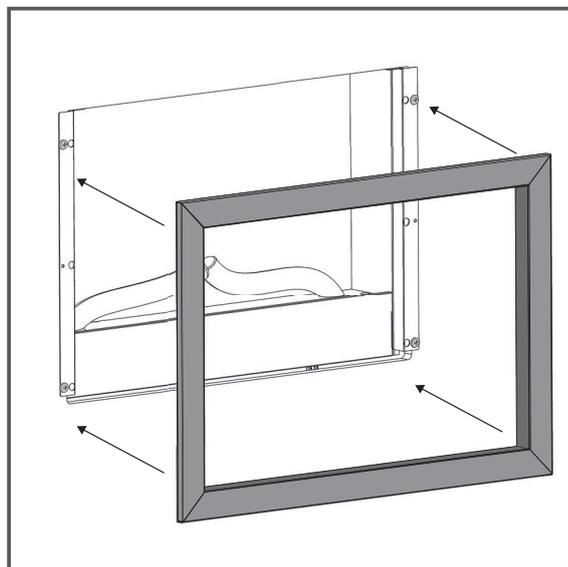

6. Once the trim is on, secure it in place at the top using 2 x screws through the 2 slots. Once fixed, check the trim is being firmly held in position.

