


# FITTING THE FRET & SPACER

(Some spacers are supplied separately)


Fit the screws from the front of the fire.

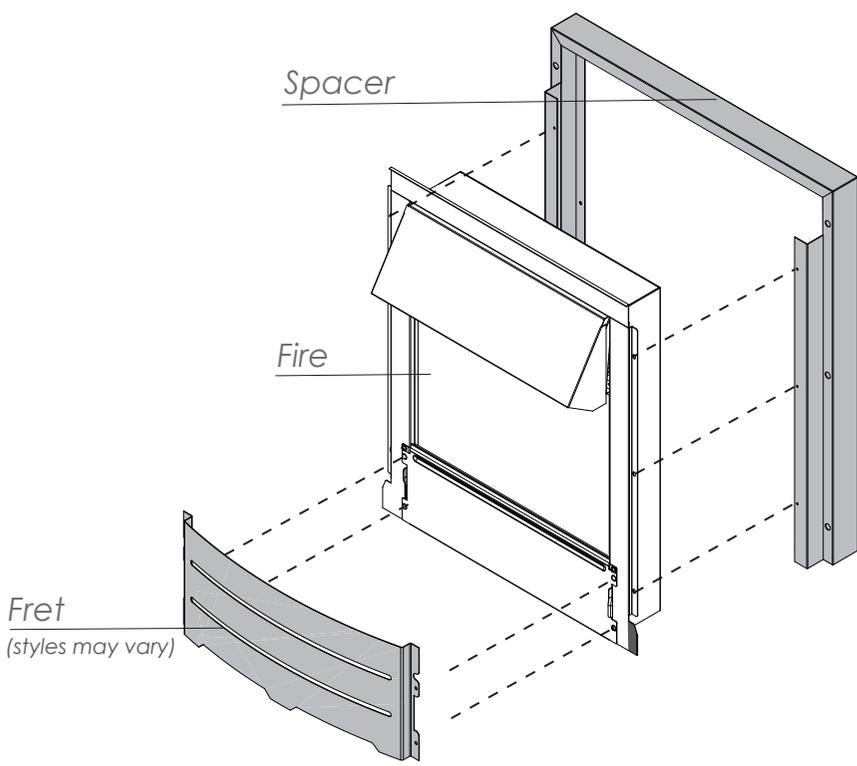

# ASSEMBLING THE FRAME

*(styles may vary)*

Screw from the rear of the trim to attach the fret to the trim.

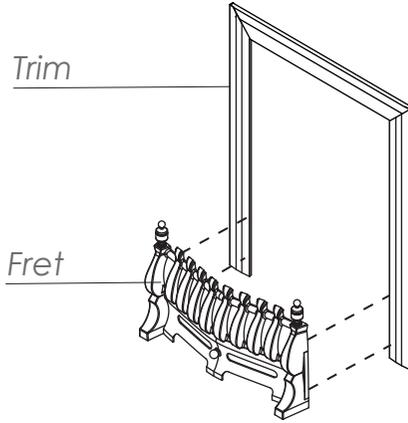

# FITTING THE FRAME / TRIM

*(styles may vary)*

Slide the frame onto the fire. **A** slides behind **AA**, **B** slides behind **BB**

